

RX-7

Factory Service Material

This manual can be downloaded for free from
<http://members.xoom.com/twinturboteddy/fsm/rx7.htm>

Or you can donate \$10 to diepat@earthlink.net through **paypal.com** and a gift CD with all manuals and resources I carry will be sent to you.

This includes

- 1993 Factory Service Manual
- 1988 Factory Service Manual
- 1995 Printed Microfiche of all parts
- 1989 Printed Microfiche of all parts*
- 1990 Printed Microfiche of all parts*
- 1986 Printed Microfiche of all parts*
- 1987 Printed Microfiche of all parts*
- 1988 Printed Microfiche of all parts*

The \$10 donation is used to offset the tremendous amount of time it takes to make everything available.



* These works are currently in process and may or not be readily available upon request. They will be hosted on the same link above and for download

WHEELS AND TIRES

OUTLINE 12— 2
 SPECIFICATIONS 12— 2
TROUBLESHOOTING GUIDE..... 12— 2
WHEELS AND TIRES 12— 3
 INSPECTION AND ADJUSTMENT..... 12— 3
 TIRE ROTATION 12— 4
 WHEEL BALANCE 12— 4
 WHEELS..... 12— 5

67U12X-001

12 OUTLINE, TROUBLESHOOTING GUIDE

OUTLINE

SPECIFICATIONS

Wheels					Tires	
Size	Offset	Diameter of pitch circle	Number of fixing holes	Material	Size	Tire pressure
Standard tire						
*7-JJx16 RH *7-JJx16 LH	40 mm (1.57 in)	114.3 mm (4.5 in)	5	Aluminum	*205/55 VR16 (Directional)	216 kPa (2.2 kg/cm ² , 32 psi)
6-JJx15 RH 6-JJx15 LH					205/60 VR 15 (Directional)	
5.5-JJx14			4	Steel or Aluminum	185/70 HR 14 185/70 R14 87H	
Temporary spare tire						
4-Tx16 4-Tx15	*30 mm (1.18 in) 40 mm (1.57 in)	114.3 mm (4.5 in)	5	*Aluminum Steel	T135/70 D16	415 kPa (4.2 kg/cm ² , 60 psi)
			4	Aluminum	T135/70 D15	


*For turbo model

77U12X-101

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Remedy	Page
Excessive or Irregular tire wear	Incorrect tire pressure	Adjust	12— 4
	Unbalanced wheel(s)	Adjust	12— 3
	Tires not rotated correctly	Rotate properly	12— 3
	Severe driving	Advise driver	—
	Improper toe-in adjustment	Adjust	—
Premature tire wear	Incorrect tire pressure	Adjust	12— 4
Tire squeal	Incorrect tire pressure	Adjust	12— 4
	Tire deterioration	Replace	—
Road noise or body vibration	Insufficient tire pressure	Adjust	12— 4
	Unbalanced wheel(s)	Adjust	12— 3
	Deformed wheel(s) or tire(s)	Repair or replace	—
	Irregular tire wear	Replace	—
Steering wheel vibration	Irregular tire wear	Replace	—
	Right and left tread depths different	Replace	—
	Deformed or unbalanced wheel(s)	Replace or adjust	12— 3
	Deformed tire(s)	Replace	—
	Unequal tire pressures	Adjust	12— 4
Loose lug nuts		Tighten	12— 5
Uneven (one-sided) braking	Unequal tire pressures	Adjust	12— 4
Steering wheel doesn't return properly, or pulls to one side (pulls to one side while vehicle is moving on a level road surface)	Incorrect tire pressure	Adjust	12— 4
	Irregular tire wear (left and right are different)	Replace	—
	Unequal tire pressures	Adjust	12— 4
	Different types or brands of tires mixed (right/left)	Replace	—
	Improperly tightened lug nuts	Tighten	12— 5
General driving instability	Unequal tire pressures	Adjust	12— 4
	Deformed or unbalanced wheel(s)	Replace	—
	Loose lug nuts	Tighten	12— 5
Excessive steering wheel play	Loose lug nuts	Tighten	12— 5
	Improperly adjusted front wheel bearing preload	Adjust	—

67U12X-003

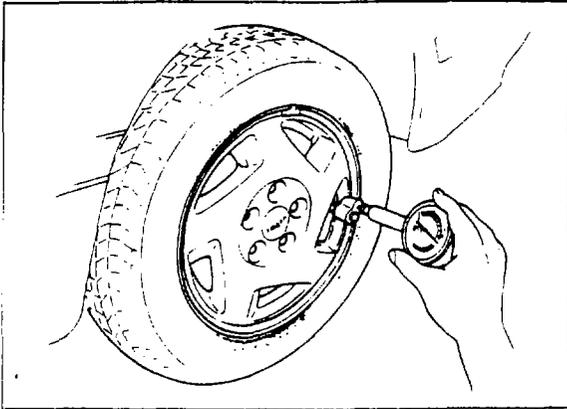

77U12X-105


WHEELS AND TIRES

INSPECTION AND ADJUSTMENTS

Check the following and adjust or replace as necessary.

1. Air pressure.

Check the air pressure of all tires, including the spare tire, with an air pressure gauge.
(See specifications on page 12-2)

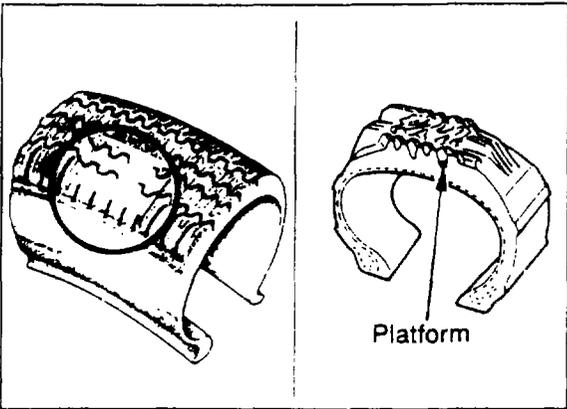

4EG12X-004

2. Tire wear


Wear Limit

Ordinary tires: 1.6 mm (0.063 in) min.

(Tire should be replaced if wear-indicators are exposed.)

Snow tires: 50% of tread

(Tire should be replaced if platform is exposed.)

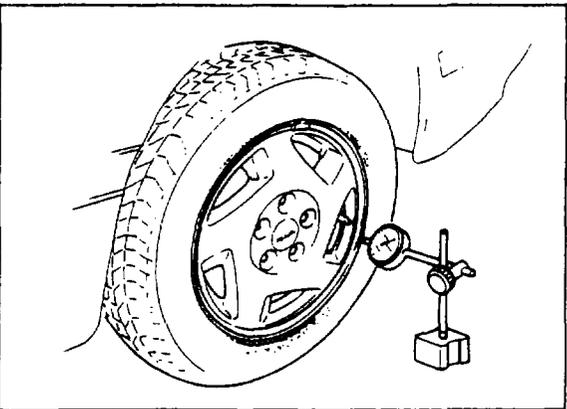

5BU12X-604

3. Wheel runout.


Wheel Runout

Horizontal: 2.0 mm (0.079 in) max.

Vertical: 2.0 mm (0.079 in) max.

Note

Measure the runout while turning the tire and wheel.

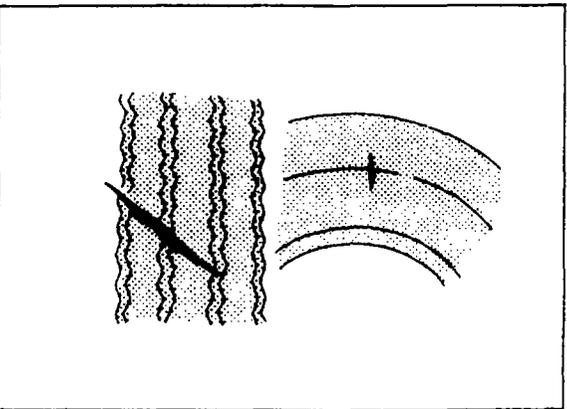


4EG12X-006

4. Cracks, damage, or foreign matter (metal pieces, nails, stones, etc.) in the tire, and cracks, deformation, or damage to the wheel.


5. Loose wheel lug nut(s).

6. Air leaking from the valve stem.


12 WHEELS AND TIRES

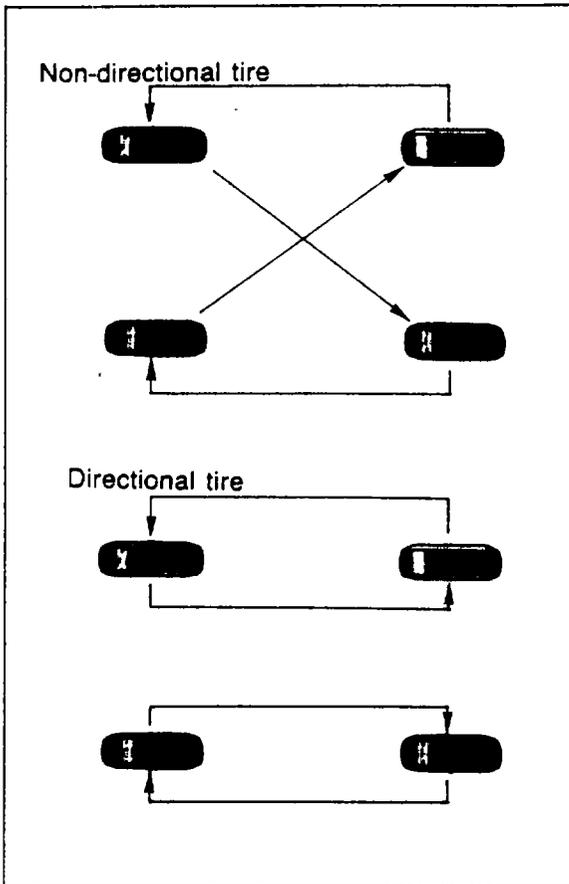

67U12X-004

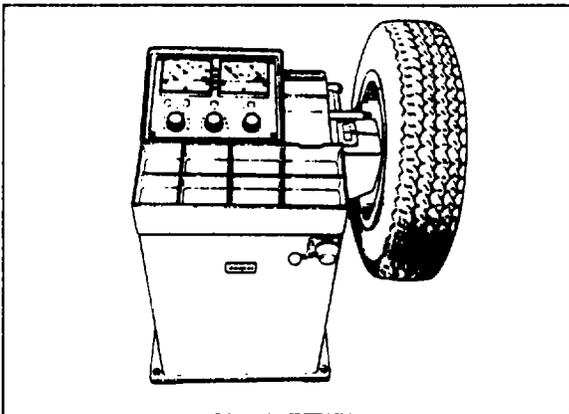

5BU12X-606

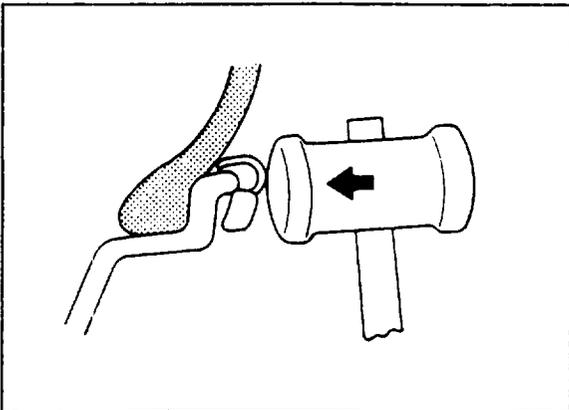

4EG12-009

TIRE ROTATION

In order to prolong tire life and to assure uniform wear, the tires should be rotated after every 3.750 miles (6.000 km).

Caution

Do not include "TEMPORARY USE ONLY" spare tire in rotation.


WHEEL BALANCE

If a wheel becomes unbalanced, or if a tire is replaced or repaired, the wheel must once again be balanced to specification.

**Amount of allowable unbalance (at rim edge):
10 g(0.35 oz) or less**

Note the following points when balancing a wheel.

1. Do not use more than two balance weights on one side. If the total weight exceeds 100g (3.5oz), re-balance after moving the tire around on the rim.
2. Attach the balance weights tightly so that they don't protrude more than 3 mm (0.12 in) out beyond the wheel surface.

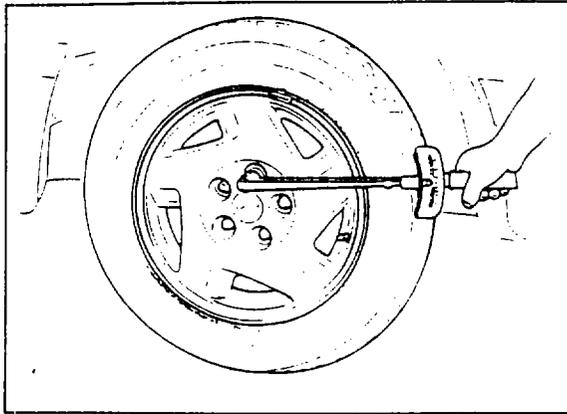

67U12X-006

WHEELS

Lug nut tightening torque:

90—120 N·m (9.0—12.0 m·kg, 65—87 ft·lb)

Note

1. Wheel-to-hub contact surfaces must be clean.
2. Never apply oil to the nuts, bolts, or wheels; doing so might cause looseness or seizure of the lug nuts.

Special Notes About Wheels and Tires

Do not use wheels or tires other than the specified types.

Notes Regarding Tire Replacement

Note the following points when tires are to be removed from or mounted onto the wheels.

1. Be careful not to scratch the tire bead.
2. Remove any pebbles, glass, nails, etc., embedded in the tire tread.
3. Be sure the air valve is installed correctly.
4. Apply a soapy solution to the tire bead and the edge of the rim.
5. After mounting a tire onto a wheel, inflate the tire to 245—294 Kpa (2.5—3.0 kg/cm², 36—43 psi). Check that the bead is seated correctly onto the rim, and that there are no air leaks; then reduce the pressure to specification.

5BU12X-608

